

Enable read Interleaved 2 of 5 barcode settings for M100BT,R1000BT

1. Setup



2. Enable



3. Configuration alphanumeric entry barcode (as Para.
value) Code0



Code 1



4. End



Enable read Interleaved 2 of 5 barcode max length =99

5. Setup



6. Enable

Max. code length



7. Configuration alphanumeric entry barcode (as Para. value)
Code9



Code 9



8. End



Enable read Interleaved 2 of 5 barcode min length =00

5. Setup



6. Enable

Min. code length



7. Configuration alphanumeric entry barcode (as Para. value)

Code 0



Code 0



8. End

